


## Assembly Instructions

BT2-MSG/SS

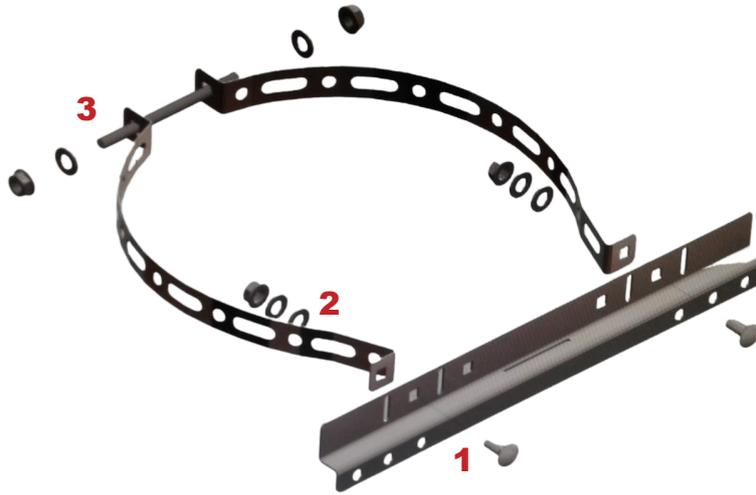

- 1** Insert square recessed bolt into the square hole on the strut and through adjustable clamps.
- 2** Place two washers on top of bolt, followed by one large nut. Tighten the clamp and strut together. Repeat this for the remaining 3 clamps.
- 3** Use the threaded bolts to tighten clamps to suit pole diameter. Tighten and secure with washer and large nuts as per picture
- 4** If you have excess clamp after tightening to pole, we recommend folding this back for a neater finished product.

2 x Struts



4 x Adjustable Clamps



2 x Threaded Bolts



12 x Washers



8 x Large Nuts



4 x Square Recessed Bolts



\* Please note - Depending on pole diameter, you may be able to use 2 adjustable clamps (1 clamp per strut).

